

**5316 MULTI-BUTTON SETS
QUICK REFERENCE GUIDE-
NEW YORK CITY
FOR DMS 100 SYSTEMS ONLY**

**REPORT ALL TELEPHONE
PROBLEMS TO:
1-800-688-8895**

PLACING A CALL

Internal - Hear dial tone
Dial 4 - digit extension number

External - Hear dial tone
9 + 1 + area code + number

HOLD

Press **HOLD** button, hang up

Retrieve Call:
Press Flashing Indicator button

TRANSFER

Press **Trans** button
Hear dial tone
Dial extension number
Announce call or wait for first ring
Press **Trans** button again
Press **Rls** button or hang up

On a busy, don't answer or when party does not wish to accept Transfer:
Press **Rls** and then your extension button
You are connected to original call

CONFERENCE

Join up to 3 Parties including yourself.
Dial first party, announce conference
Press **Conf 3** or **Conf** button
Hear special dial tone
Dial third party, when party answers
Press **Conf 3** or **Conf** button

**CALL
PICKUP**

To pick up another call in your group
Hear dial tone
Press **Call Pickup Button** or **Press the * key**
You are connected to ringing call

**CALL FORWARD
ALL CALLS**

Redirects calls to another extension
With handset on hook
Press **Call Fwd** or **Forward** button (indicator flashes)
Dial extension number (no sound is heard)
Press **Call Fwd** or **Forward** button (indicator is steady)
To Cancel:
With handset on hook
Press **Call Fwd** or **Forward** button (indicator goes out)

AUTODIAL

(Optional)
Store numbers for one touch dialing.

To program:
With handset in place, Press **Autodial** button (indicator
Dial telephone number to be stored
Press **Autodial** button again, Number is stored

To Use:
Hear dial tone, Press **Autodial** button

MESSAGE WAITING

Alerts you when a new message has been left.
When the indicator next to Msg Wait button is steady:
lit:
Lift handset
Press **Msg Wait** button, dialing voice mail number
Follow prompts to retrieve your messages

SPEAKERPHONE / MUTE

To place a call using the Speakerphone:
Press **Handsfree** (indicator is steady)
Dial desired number
When party answers, speak **towards set**
To end a call:
Press **Rls** or **Handsfree**

To change from Handset to Handsfree speaker:
While on call, press **Handsfree**

To change from Handsfree speaker to Handset:
While on **Handsfree speaker**, lift Handset (the
Indicator next to **Handsfree** goes out and handset
is connected

Mute
(When light flashes mute is engaged)
Press **mute** to toggle on and off

OTHER FEATURES

Rls (Release)

Pressing the release (Rls) allows you to disconnect from your current call.

On-Hook Dialing

Pressing any line key will activate dial tone on your speaker.

Volume Control (Ringer and Speaker)

While set has a call ringing or a call on Handsfree speaker, use the rocker switch to adjust volume

Right - to raise volume or
Left - to lower volume.